


PREPARATION

We've got support for multiple types of Toothed Idlers on board, and we understand that this might require a bit of clarification. So, without further ado, let's dive into the details!

MEASURE YOUR TOOTHED IDLER

To find the right spacers, measure your pulley's height and check the next page for "Xmm," where X is the height. Print the corresponding spacers.

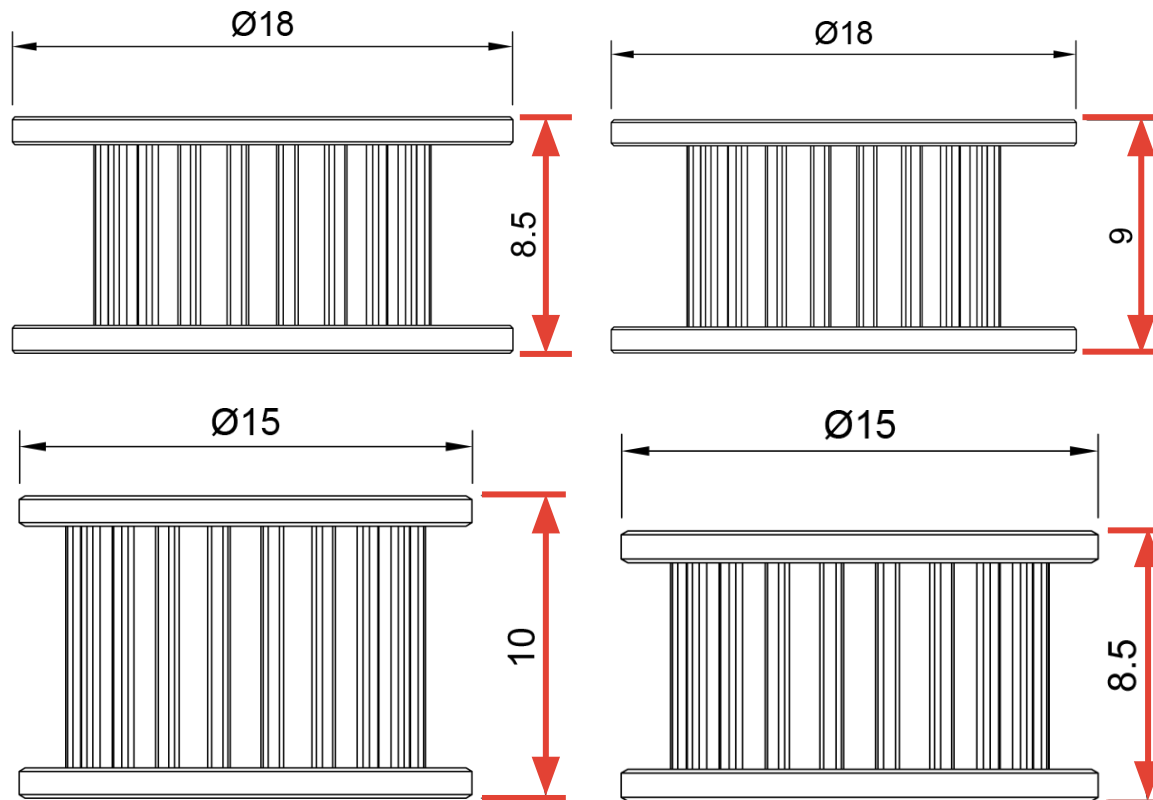

PREPARATION

Printed the manual? Write down your Toothed Idler size on the line provided below to save yourself from measuring it repeatedly:

Toothed Idler Size: _____

On the website's configurator, there's a section for choosing your printed spacer. Make sure it matches the image provided below for accurate selection.

